

HI THERE!

Please take a moment to read this useful guide to the Cinderella incineration toilet.

INCINERATION TOILETS

Liner seam?

Liner seam? Does it really matter? Yup! The liner seam is to run left to right for males and right to left for ladies.



Don't leave it hangin'

Ensure you don't put the toilet seat down on top of the edges of the liner. This will stop it from falling down when you flush.

Paper towering?

If you are a person who likes to use excessive amounts of toilet paper and it sits high in the liner, pour some water on it to keep it down before flushing.



Don't panic!

Paper jammed in the hatch? Here's what to do:

- 1. After flushing, check that the liner/bag has gone.
- 2. If not put the lid down and press the flush button for about 13 seconds until the toilet beeps and resets itself.
- 3. Open and keep the lid up. Press the flush button 3 seconds until the hatch opens. You can now clear the paper using a cup of water and a toilet brush (if the toilet is hot, you will need to wait until the toilet has cooled down before doing this).





Enjoy your stay...

..but please don't put plastic down the toilet such as condoms and some sanitary products. Do not dispose of rubbish or excess food in the toilet.

Don't force it!

Do not try to force the hatch open and never turn off the power while the fan is operating.



Now what?

You've been through all tips and tricks under the sun, and nothing seemed to help? Don't hesitate to contact your host, or visit the EcoAsh web page; www.ecoash.co.nz

